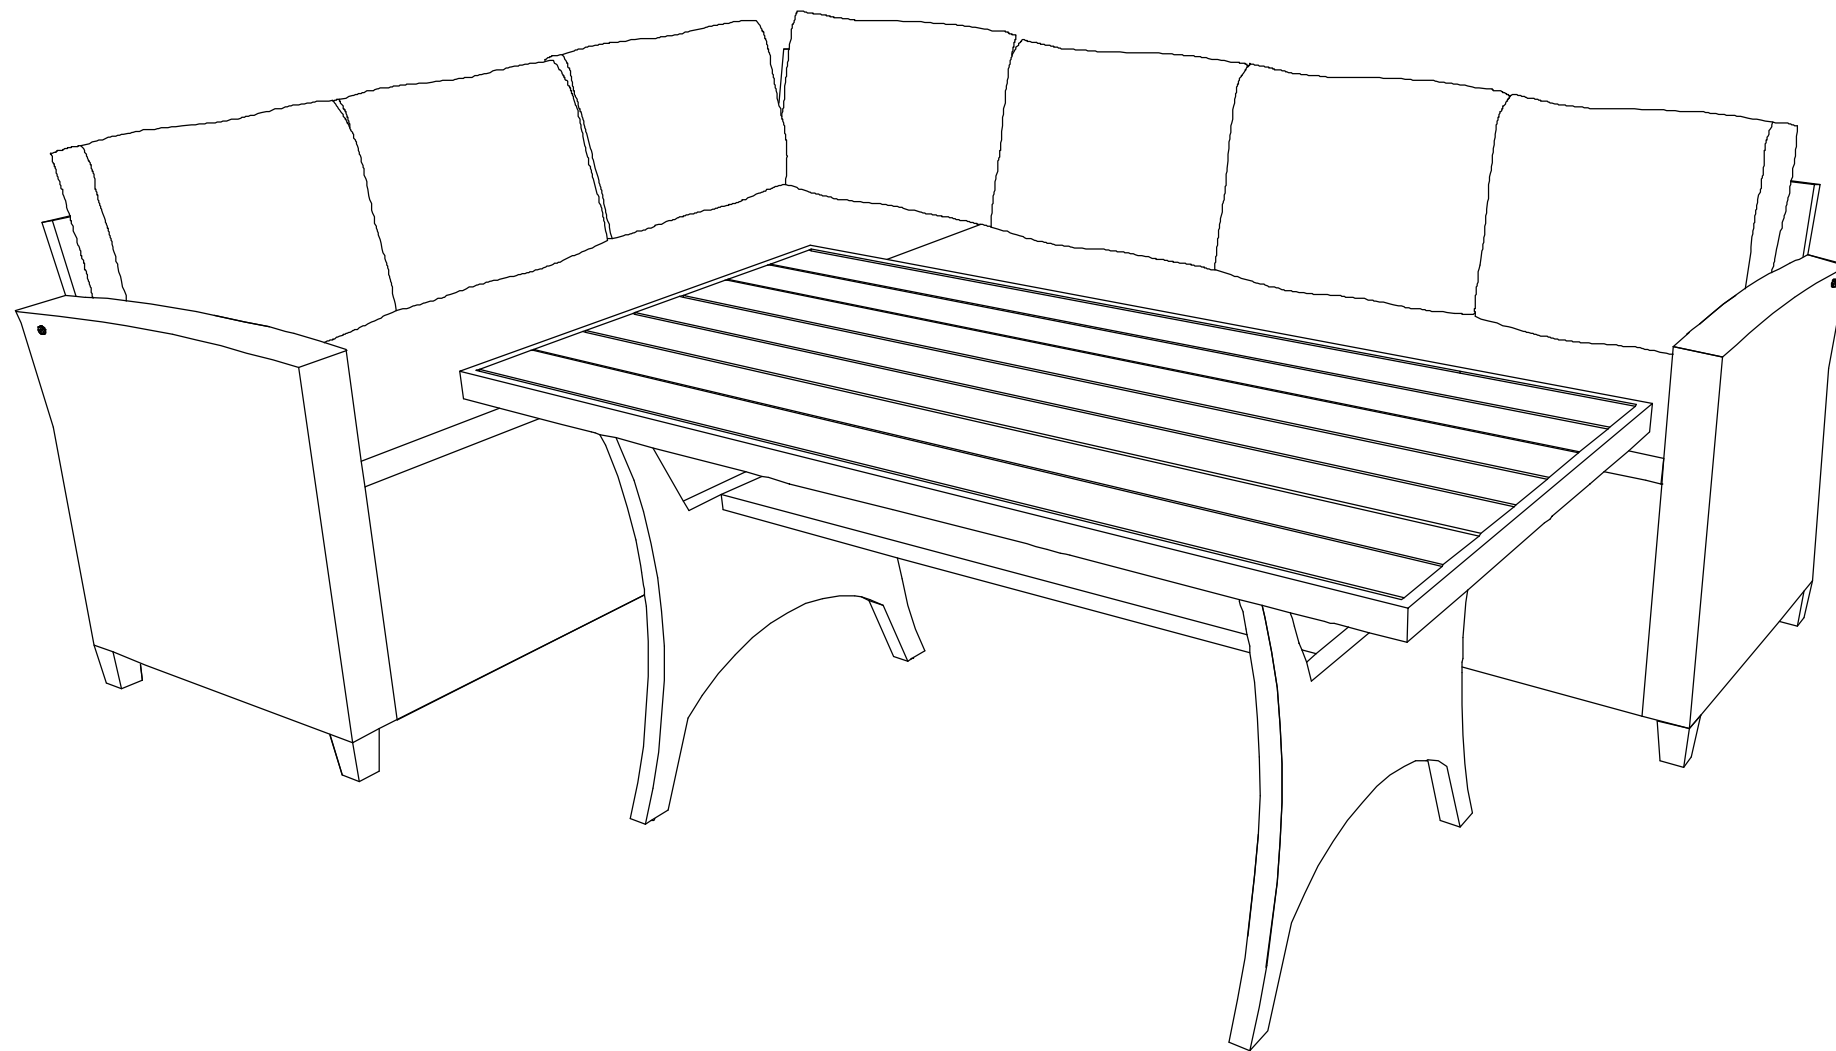


STOCKHOLM




BEZPEČNOSTNÉ POKYNY A POUŽÍVANIE


- Pozorne si prečítajte nasledujúce pokyny a výrobok používajte v súlade s návodom.
- Návod si dobre uschovajte. Produkt odovzdajte spolu s návodom na inštaláciu a obsluhu, ak ho majú používať iné osoby.
- Varovania, upozornenia a pokyny uvedené v tejto príručke nemusia pokrývať všetky možné situácie, ktoré môžu nastať pri používaní produktu. Ak potrebujete ďalšie informácie alebo pomoc, kontaktujte nás.
- Tento výrobok nie je preliezačkou na hranie detí, čo by mohlo spôsobiť zranenie. Prosíme, nenechávajte deti bez dozoru.
- Pred použitím výrobok skontrolujte, či nie je poškodený. Nepoužívajte ho, ak je ohnutý, prasknutý alebo poškodený.
- Nesprávne zloženie môže spôsobiť naklonenie predmetu.
- Normálne fungovanie produktu môže byť zaručené, ak je riadne zmontovaný, poskladaný a vždy umiestnený na rovnom povrchu.
- Neumiestňujte výrobok do blízkosti ohňa alebo zdrojov tepla! Pozor nebezpečenstvo požiaru.
- Pri montáži dávajte pozor na svoje ruky! Odporúčame nosiť ochranné prostriedky, ako napríklad rukavice na montáž.
- Na čistenie nepoužívajte korozívne a abrazívne čistiace prostriedky či rozpúšťadlá!
- Je dôležité, aby každý výrobok, ktorý je zmontovaný pomocou akéhokoľvek druhu skrutiek, bol znovu utiahnutý 2 týždne po montáži a raz za 3 mesiace – aby sa zabezpečila stabilita počas celej životnosti výrobku.

MONTÁŽNY NÁVOD

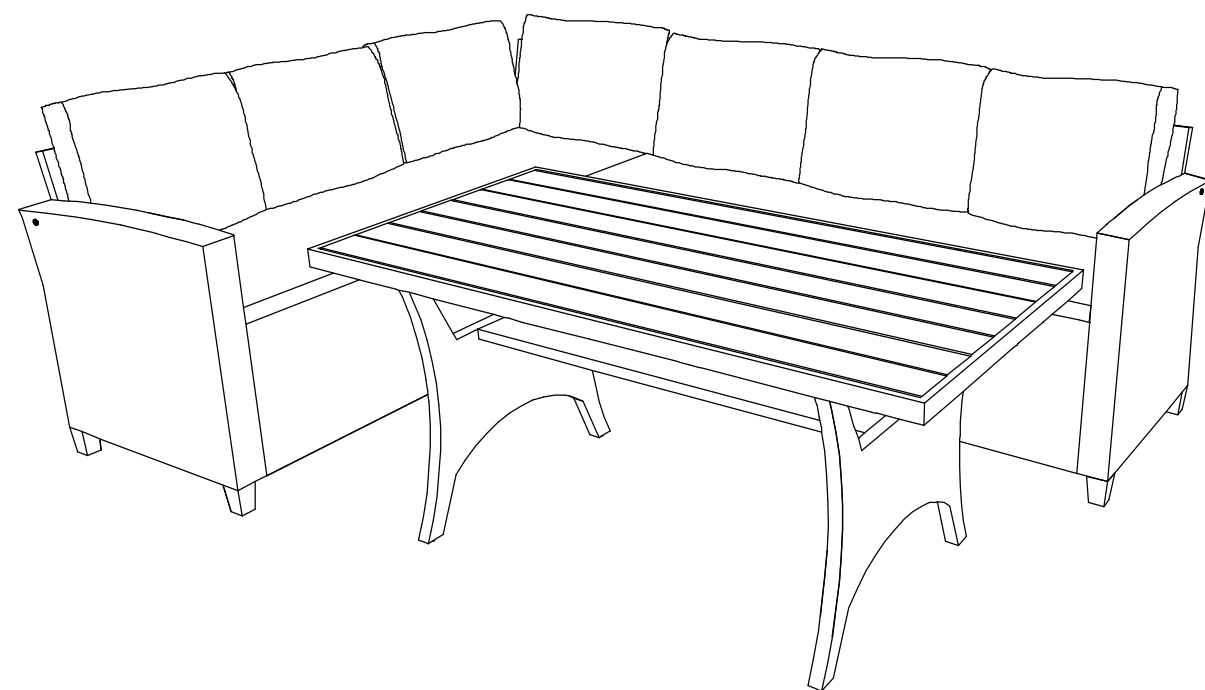
MODEL 1










MODEL 2

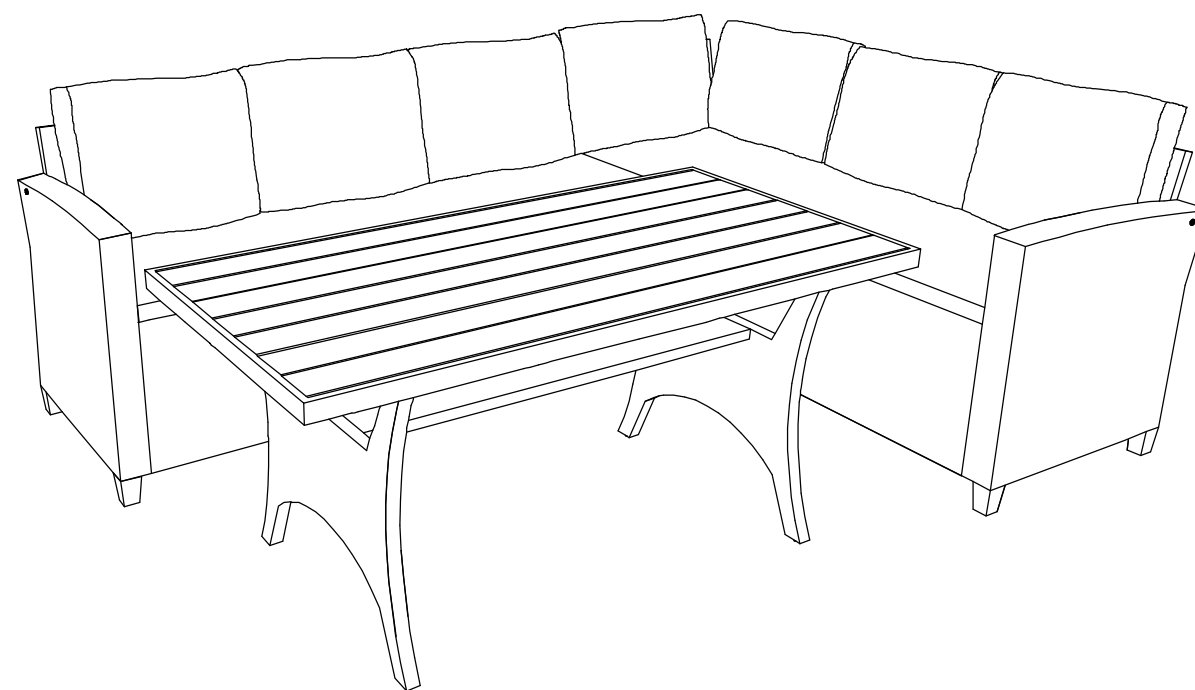

MODEL 1

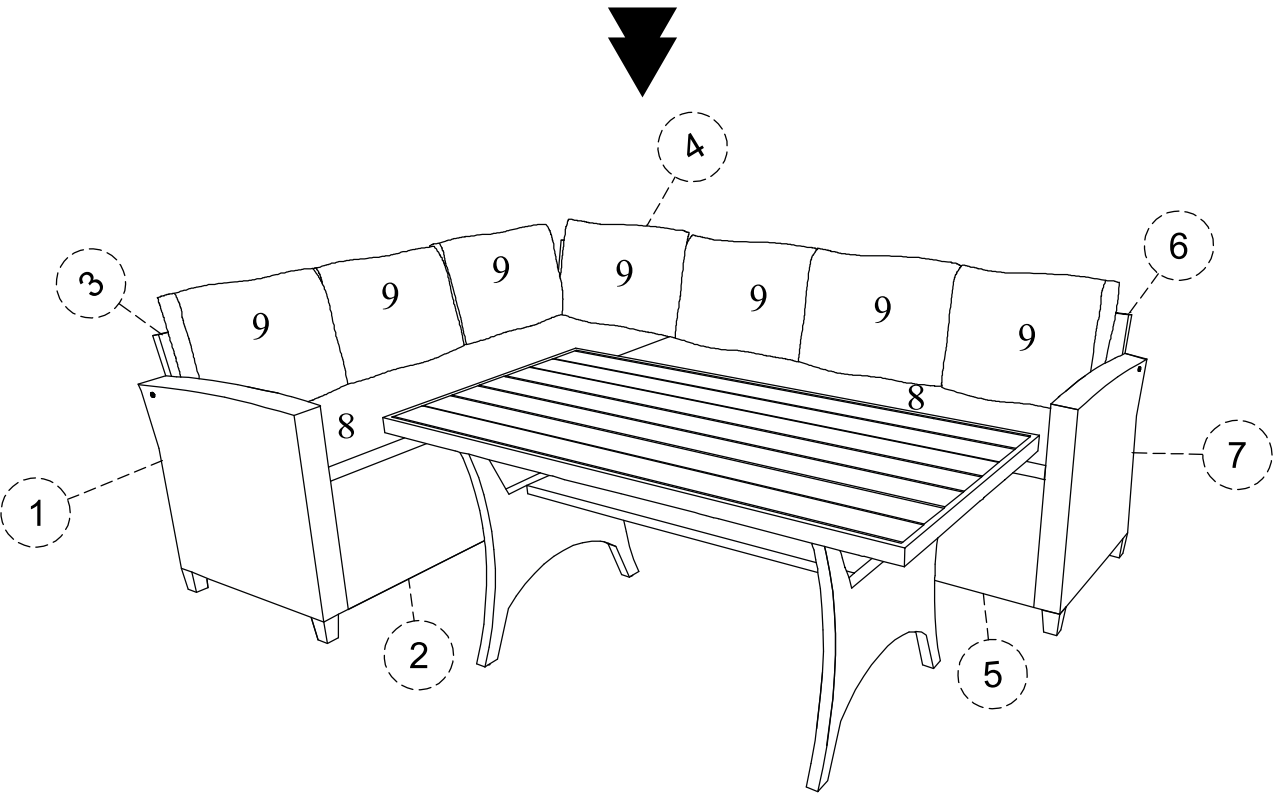

1	2	3	4	5	6	7	8	9
								
1 ks	1 ks	1 ks	1 ks	1 ks	1 ks	1 ks	2 ks	7 ks

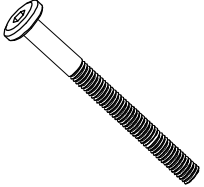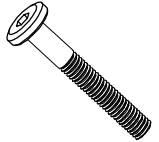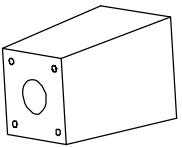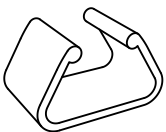A	B	C	D	E	F	G	H
							
M6x40 mm	M6x120 mm	M6x55 mm	Ø16X1 mm				M6x45 mm
8 ks	2 ks	8 ks	24 ks	8 ks	2 ks	2 ks	14 ks

KROK 1

ČASŤ 1

KROK 2

The diagram illustrates the assembly of a wooden cabinet in two steps.
Step 1 (KROK 1): A wooden frame (2) is shown. A back panel (3) is being attached to the frame using four screws (D) and a cam bolt (H). The back panel is shown in two positions: partially attached and fully attached. A 50% completion status is indicated.
Step 2 (KROK 2): A top panel (1) is being attached to the frame using four screws (A) and a cam bolt (D). The top panel is shown in two positions: partially attached and fully attached. A 50% completion status is indicated.
Parts List: The parts are labeled with numbers in circles: 1 (top panel), 2 (frame), 3 (back panel), H (cam bolt), D (screw), and A (screw).
Assembly Instructions: The instructions are written in Czech. Step 1: "Připevňujeme zadní desku (3) k rámu (2) šroubky (D) a zámkovou šroub (H)." Step 2: "Připevňujeme horní desku (1) k rámu (2) šroubky (A) a zámkovou šroub (D)."

2

3

H

D

50%

1

A

D

50%

The diagram illustrates the assembly of a wooden cabinet in two steps, KROK 1 and KROK 2, separated by a vertical line. A central label 'ČAŠŤ 1' is positioned above the line.

KROK 1: Shows the initial assembly of the cabinet frame. A curved backrest (1) is attached to the side rails using screws (H) and (D). The top panel (3) is then attached to the backrest using screws (A) and (D). A callout shows a screw being inserted into a pre-drilled hole, with a 50% completion indicator.

KROK 2: Shows the final assembly of the cabinet. The top panel (3) is attached to the backrest using screws (A) and (D). A callout shows a screw being inserted into a pre-drilled hole, with a 50% completion indicator.

KROK 1

ČASŤ 1

KROK 2

The diagram illustrates the assembly of a wooden cabinet in two steps.
Step 1 (KROK 1): A wooden frame (2) is shown. A back panel (3) is being attached to the rear of the frame. Screws (D) are used to secure the back panel to the frame's rear rails. A cam bolt (H) is shown being inserted into the back panel. A callout shows a cam bolt (H) being inserted into a hole in the back panel (3) using a screwdriver. The completion status is 50%.
Step 2 (KROK 2): A top panel (1) is being attached to the front of the frame. Screws (A) are used to secure the top panel to the frame's front rails. A cam bolt (D) is shown being inserted into the top panel. A callout shows a cam bolt (D) being inserted into a hole in the top panel (1) using a screwdriver. The completion status is 50%.
Parts List:
- 2: Wooden frame
- 3: Back panel
- 1: Top panel
- D: Screws
- H: Cam bolt
- A: Screws

KROK 1

ČASŤ 1

KROK 2

The diagram illustrates the assembly of a wooden cabinet in two steps. **KROK 1** shows the initial assembly of the cabinet frame with a lid. A callout indicates the installation of a hinge (H) and a screw (D). **KROK 2** shows the final assembly with a callout for a hinge (A) and a screw (D). A 50% completion indicator is shown at the bottom of each step.

2

3

1

50%

50%

KROK 1

ČASŤ 1

KROK 2

The diagram illustrates the assembly of a wooden cabinet in two steps. **KROK 1** shows the initial assembly of the cabinet frame with a lid. A callout indicates the installation of a hinge (H) and a screw (D). **KROK 2** shows the final assembly with a callout for a hinge (A) and a screw (D). A 50% completion indicator is shown at the bottom of each step.

2

3

1

50%

50%

KROK 1

ČASŤ 1

KROK 2

The diagram illustrates the assembly of a wooden cabinet in two steps. **KROK 1** shows the initial assembly of the cabinet frame with a lid. A callout indicates the installation of a hinge (H) and a screw (D). **KROK 2** shows the final assembly with a callout for a hinge (A) and a screw (D). A 50% completion indicator is shown at the bottom of each step.

2

3

1

50%

50%

KROK 3

4

B

D

A

D

100%

HOTOTO

E

C

D

100%

5/15

KROK 3

4

B

D

A

D

100%

HOTOTO

E

C

D

100%

5/15

[illegible]

KROK 3

5/15

4

H

D

B

A

100%

HOTOVO

E

C

100%

KROK 3

5/15

4

H

D

B

A

100%

HOTOVO

E

C

100%

KROK 3

5/15

4

H

D

B

A

C

E




100%

HOTOVO


100%



[illegible][illegible]






KROK 1 50%	ČASŤ 2 KROK 2 50%
KROK 3 100%	HOTOVĽ 100%

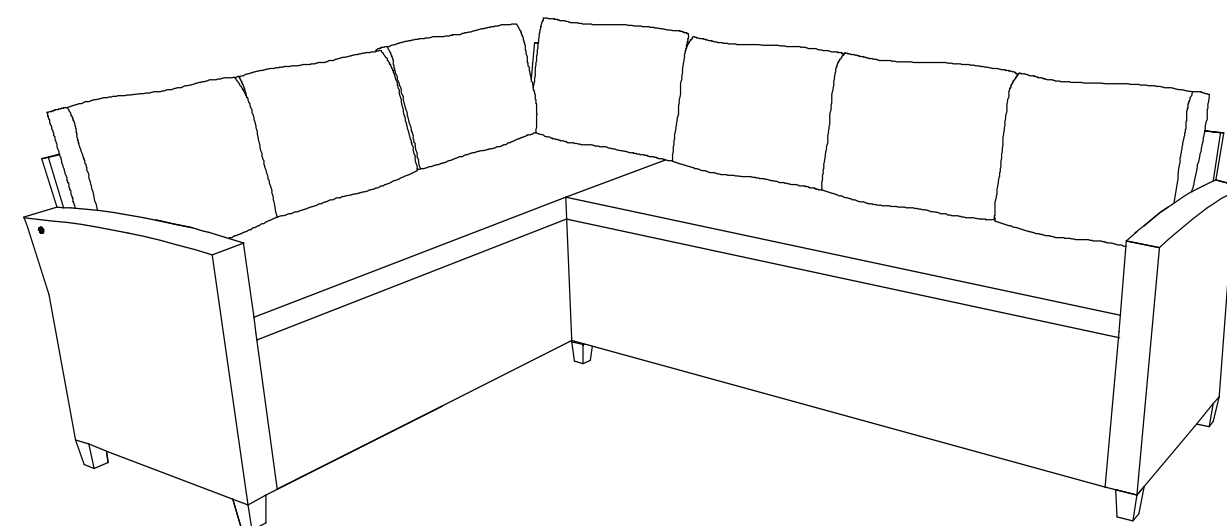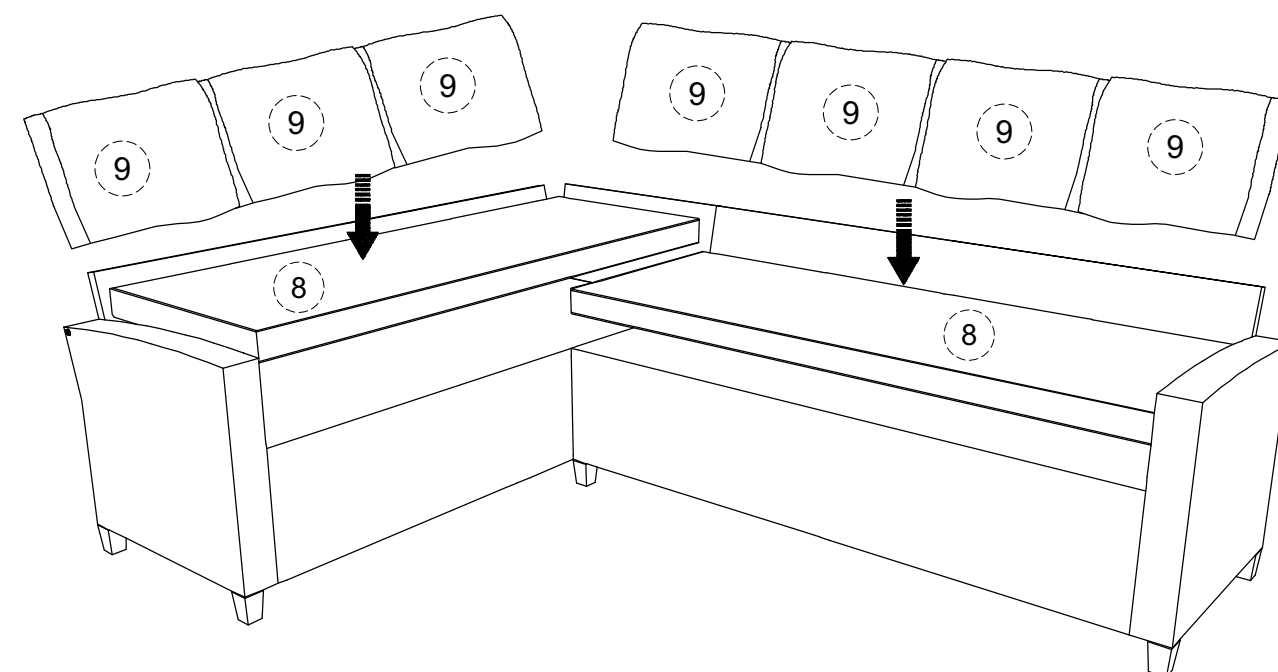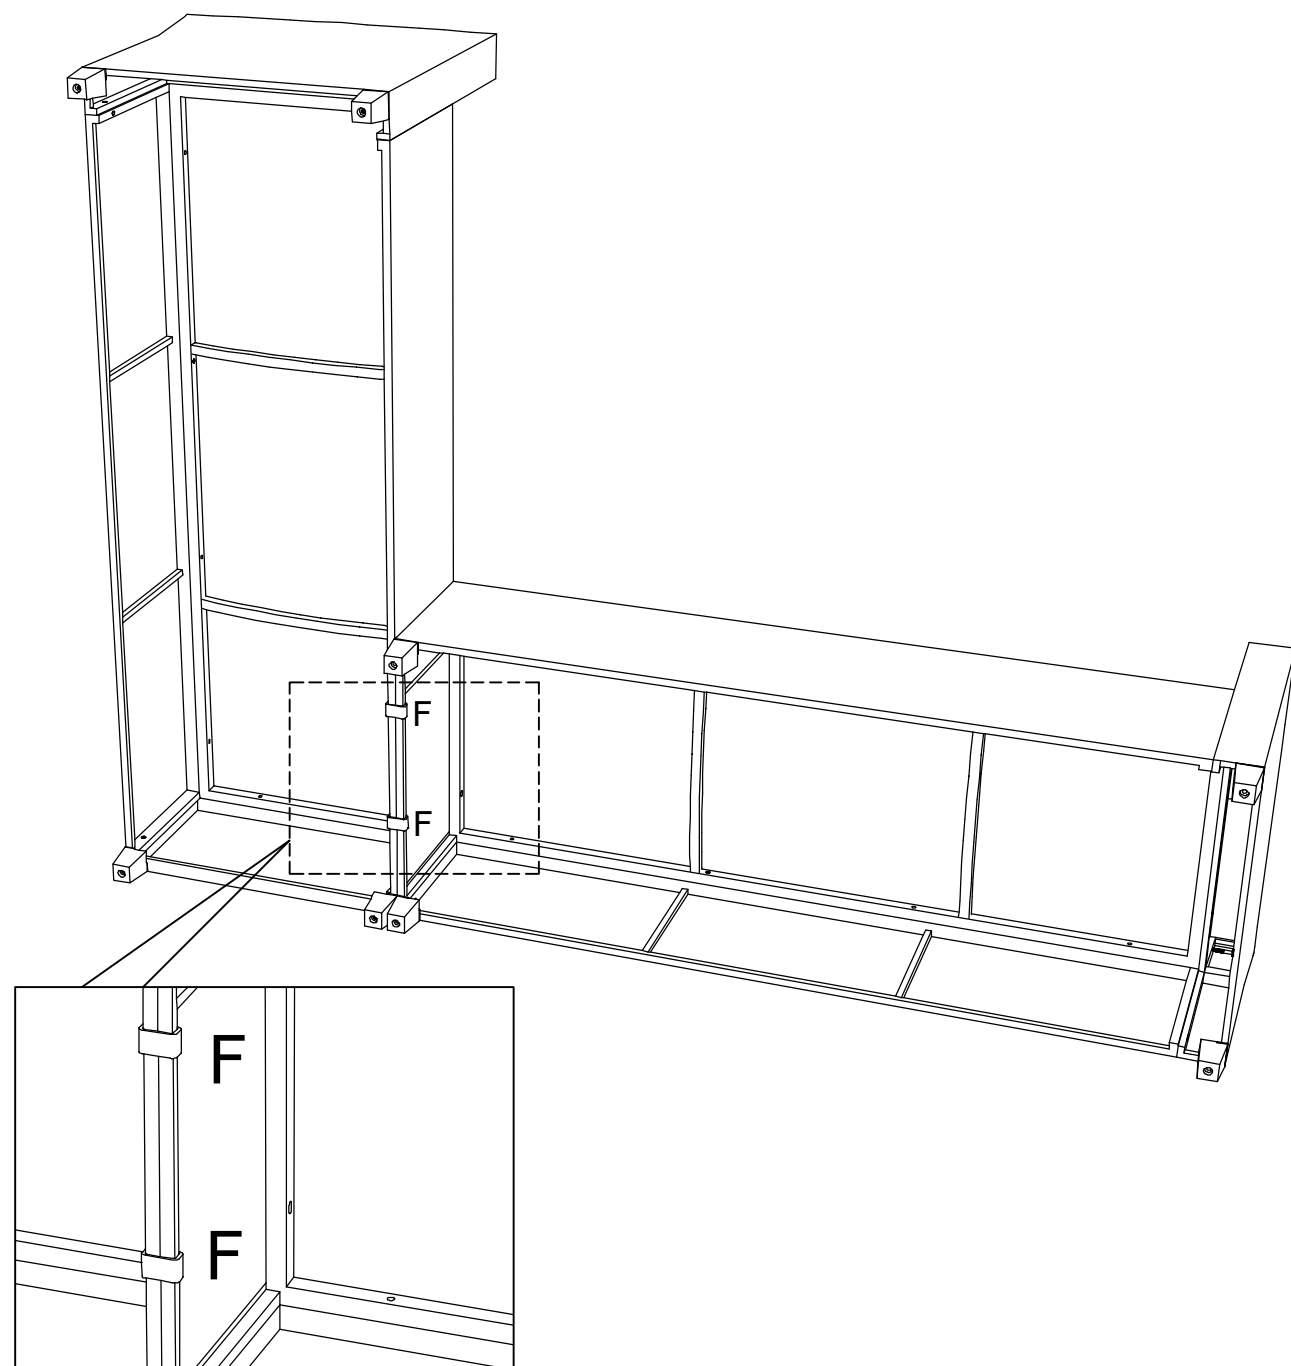

MODEL 2

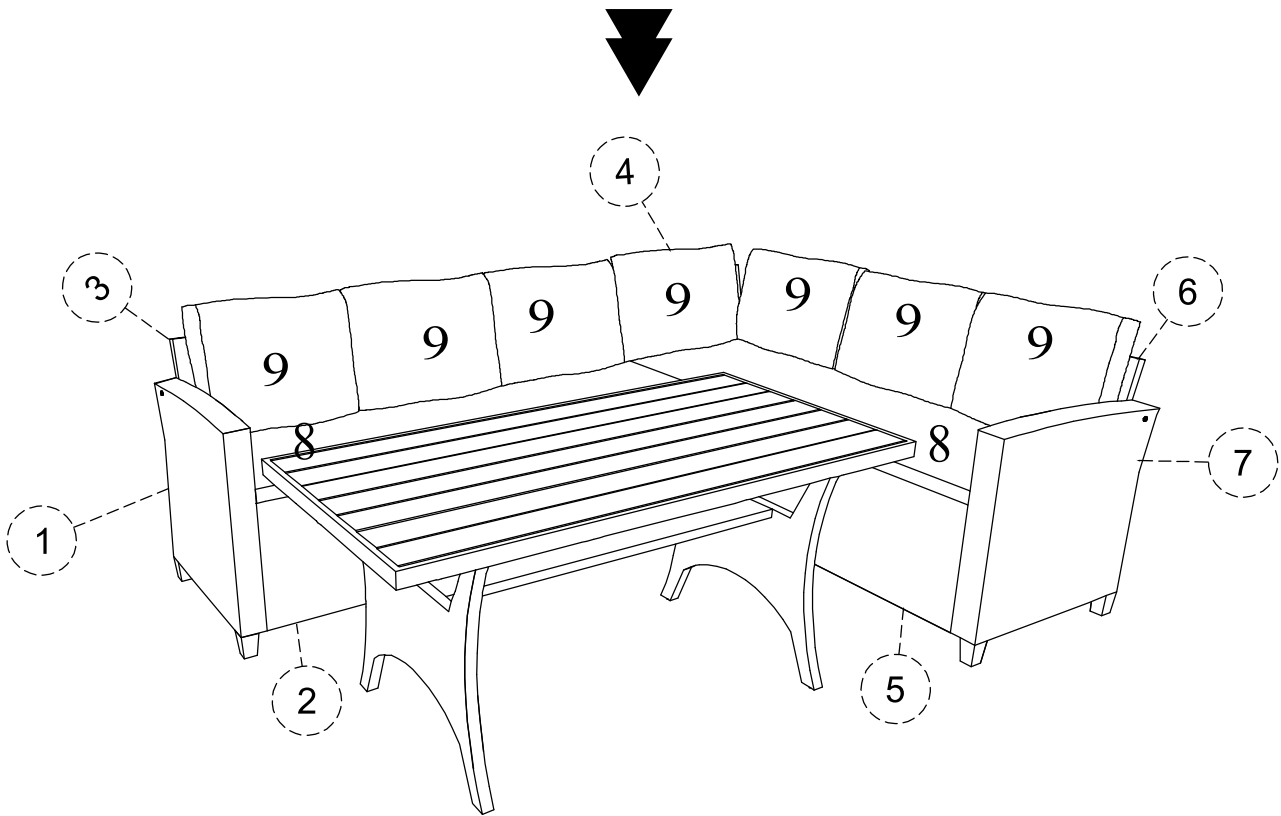



1	2	3	4	5	6	7	8	9
								
1 ks	1 ks	1 ks	1 ks	1 ks	1 ks	1 ks	2 ks	7 ks

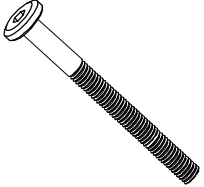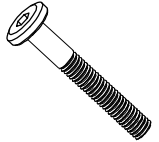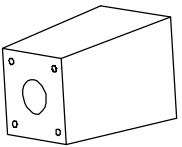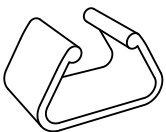A	B	C	D	E	F	G	H
 M6x40 mm	 M6x120 mm	 M6x55 mm	 Ø16X1 mm	 8 ks	 2 ks	 2 ks	 M6x45 mm 14 ks

KROK 1



ČASŤ 1

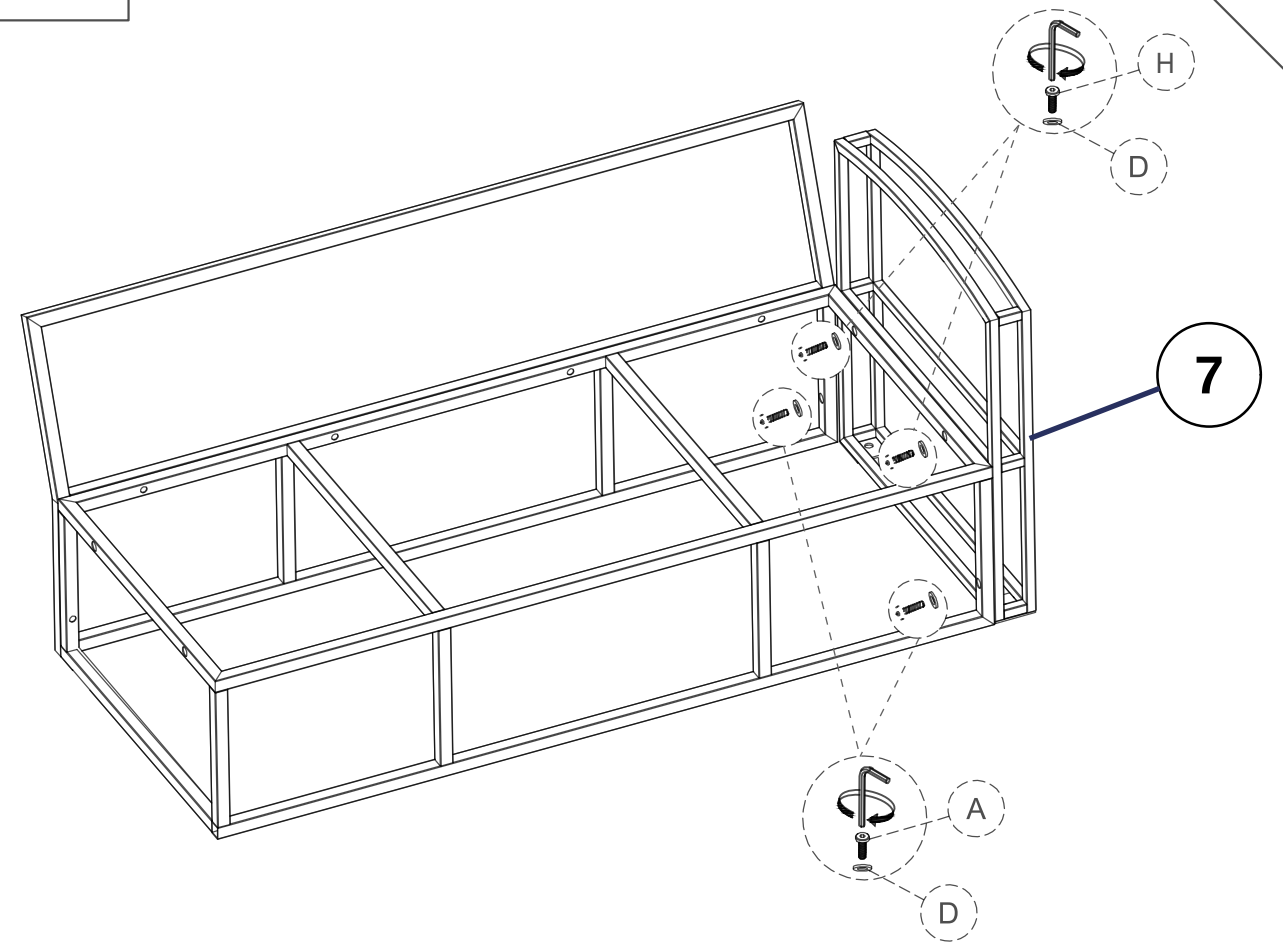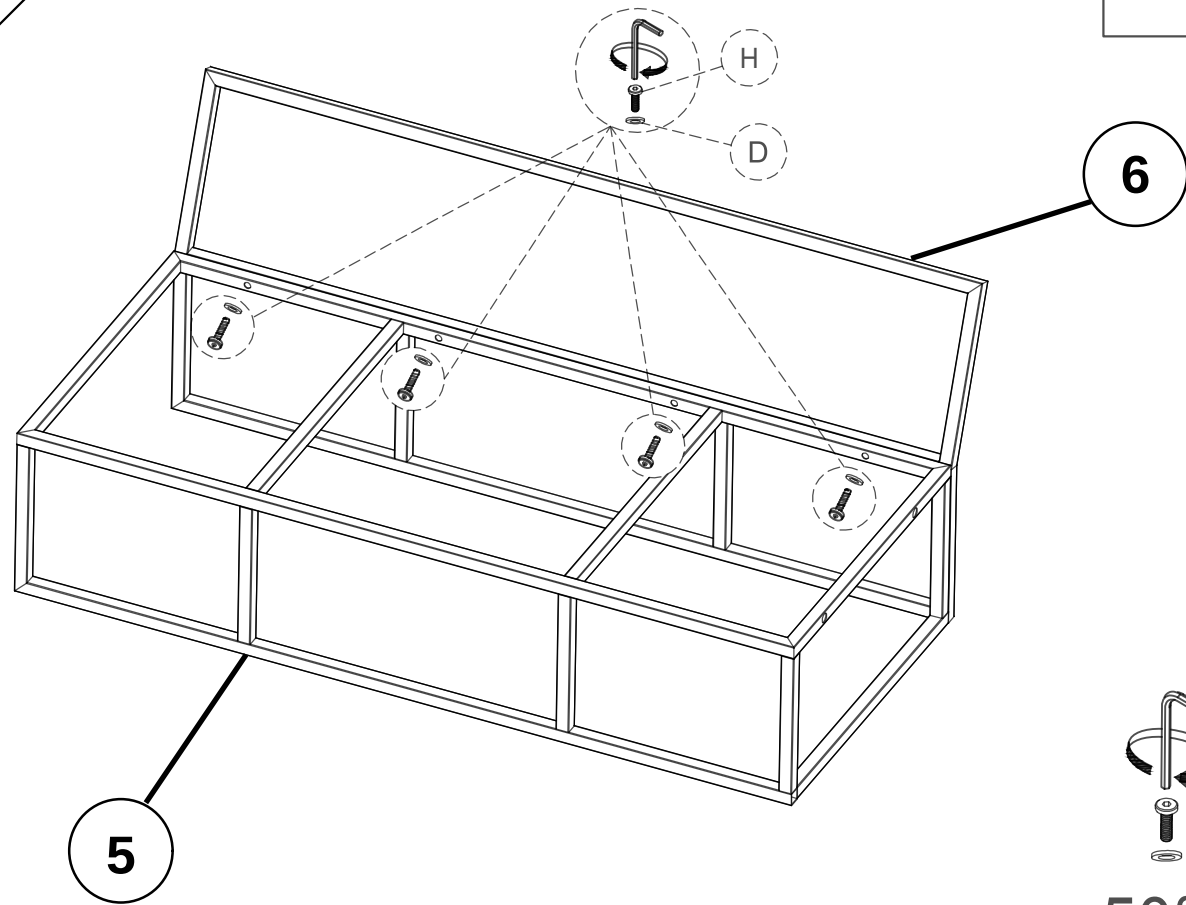KROK 2






KROK 3


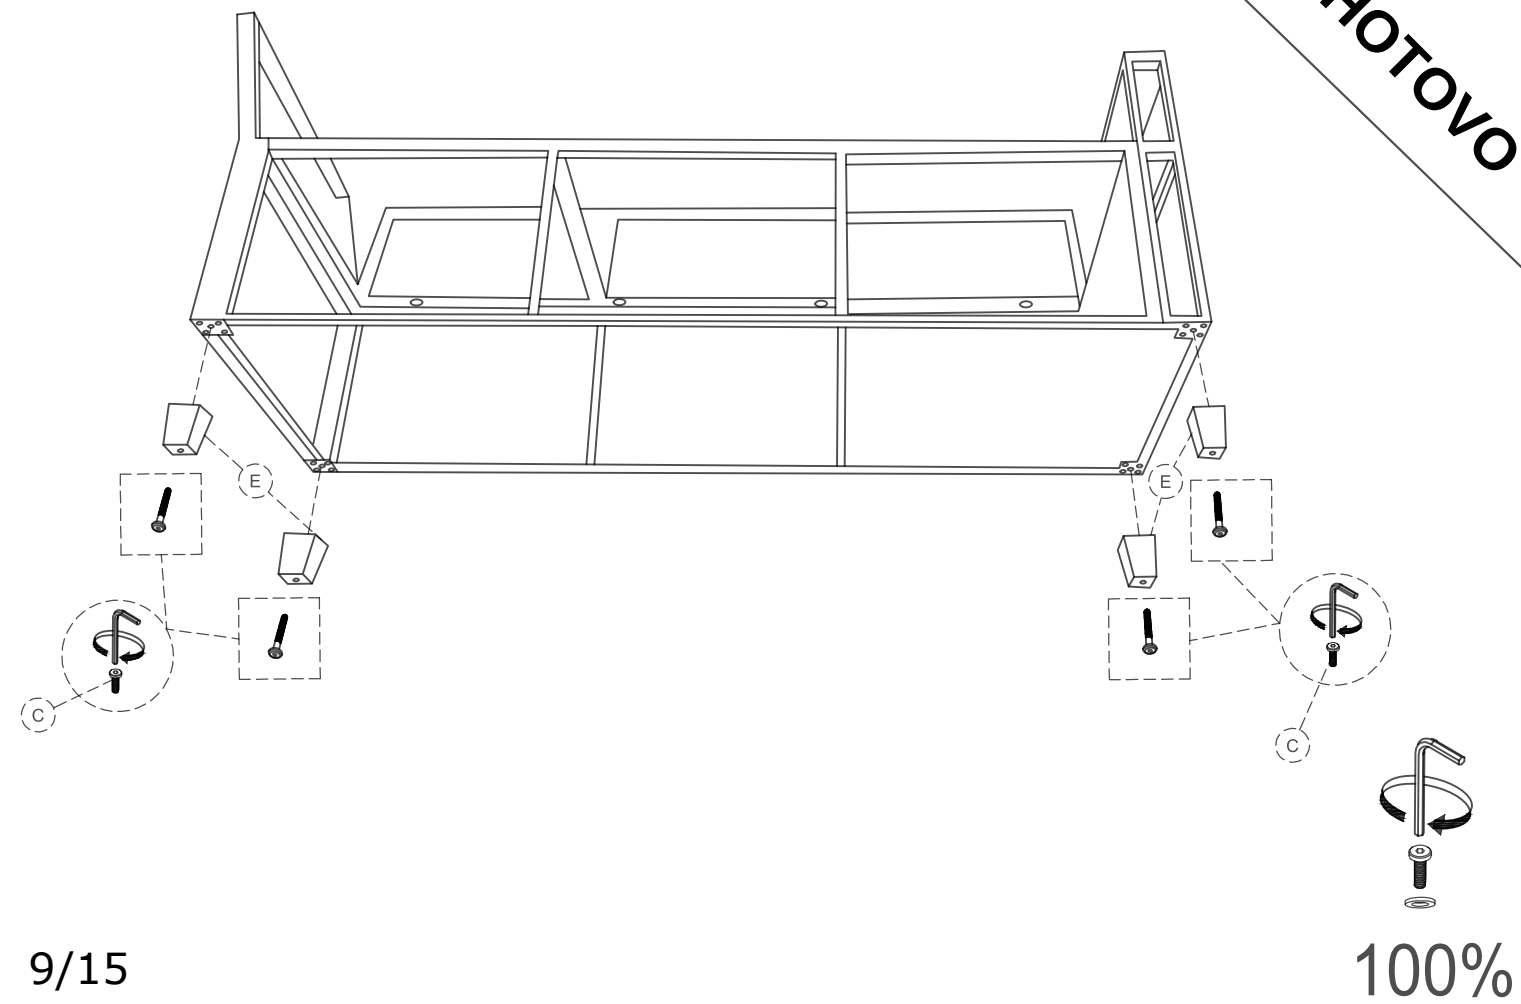
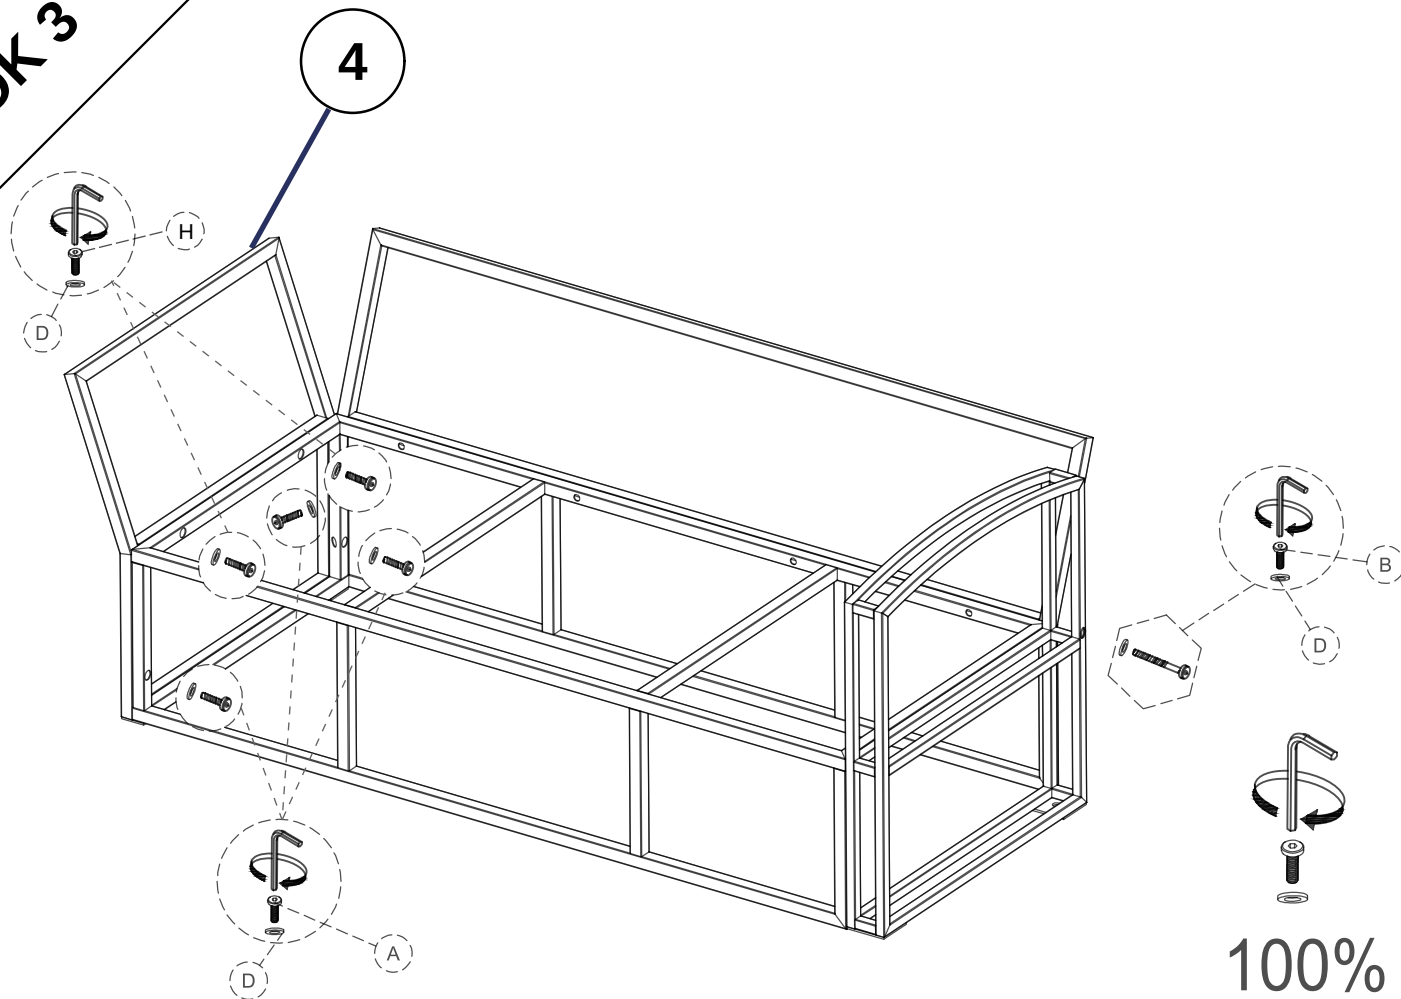
HOTOVO



KROK 1 50%	ČASŤ 2 KROK 2 50%
KROK 3 100%	HOTOVO 100% 10/15

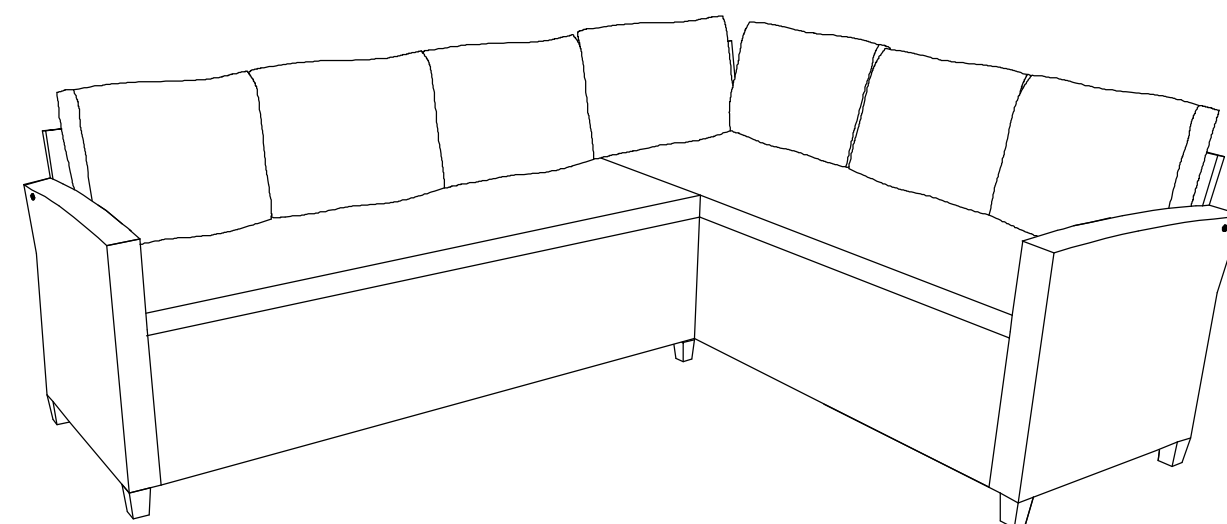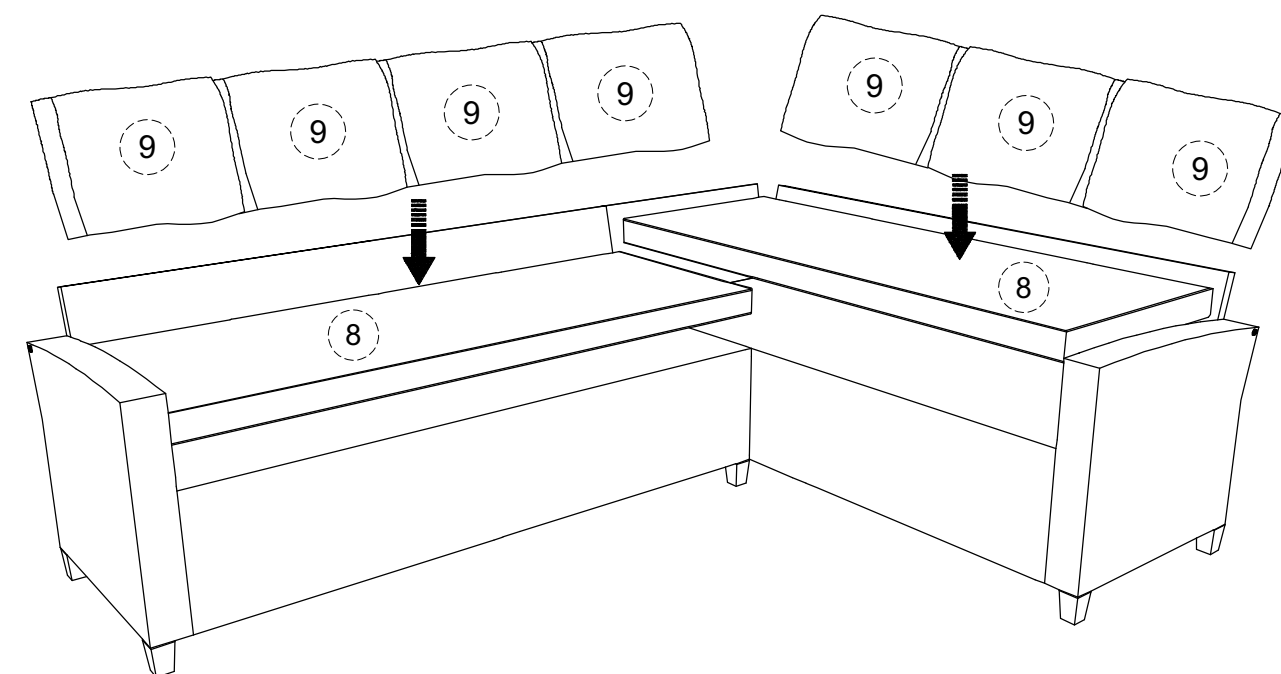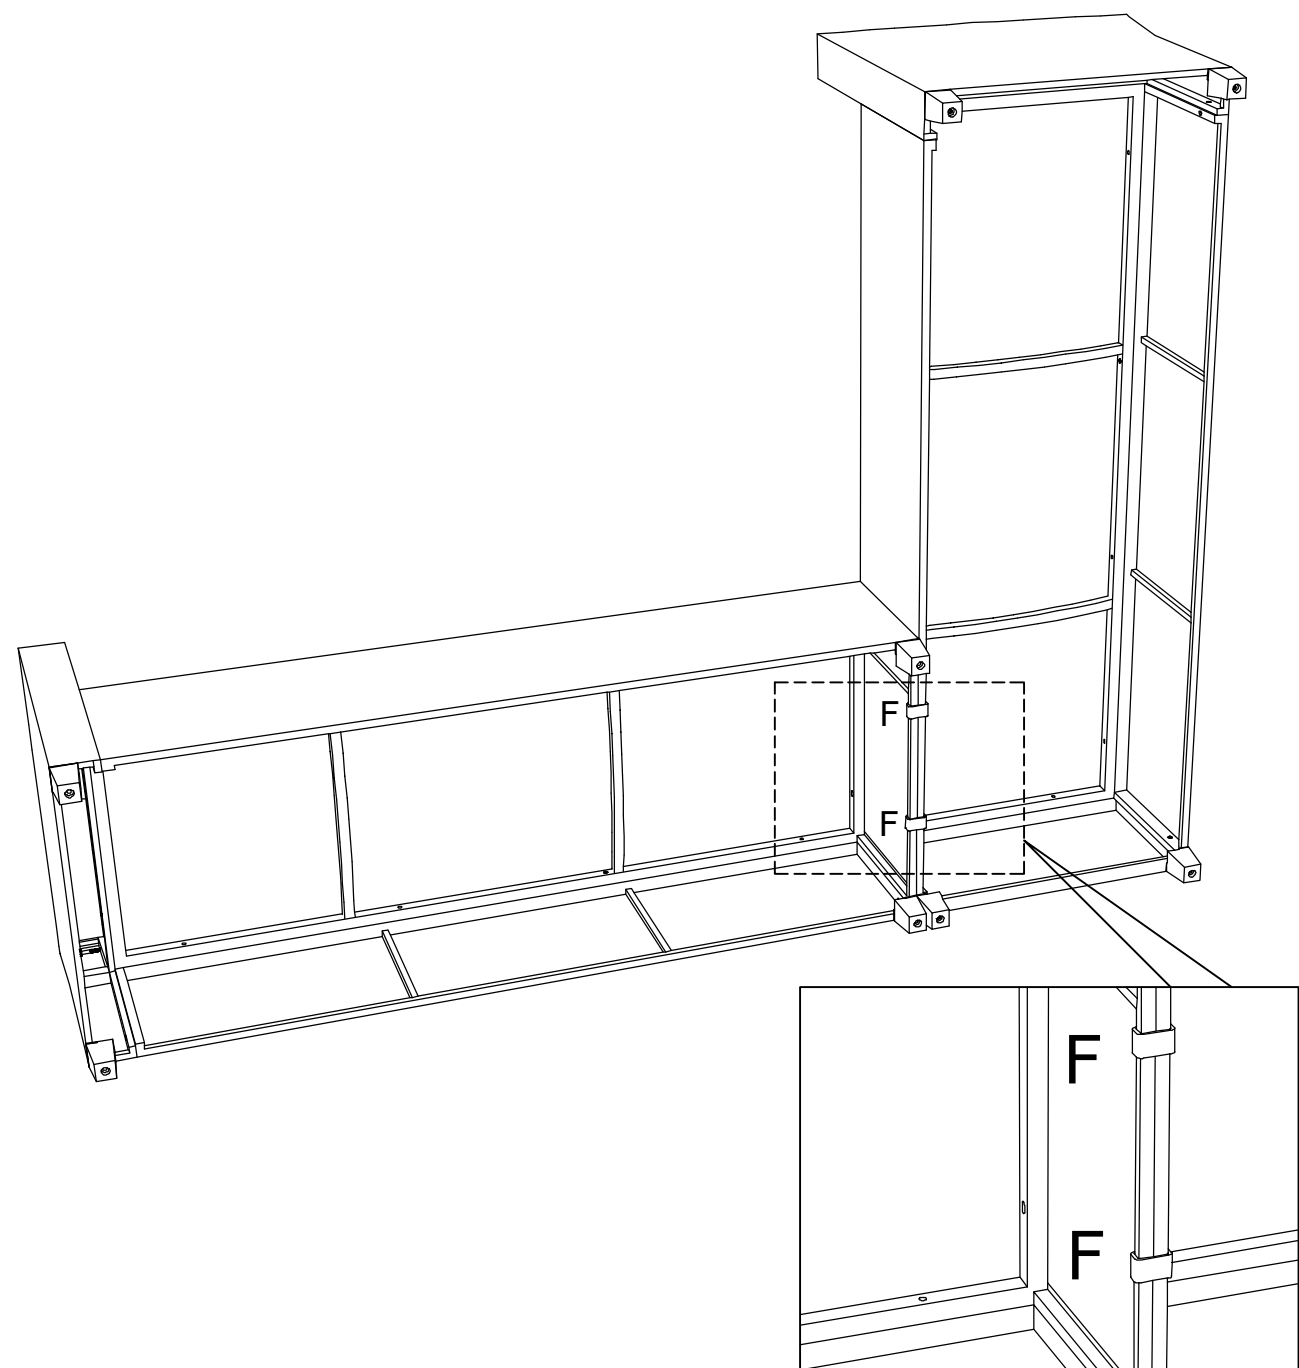

MONTÁŽNY NÁVOD

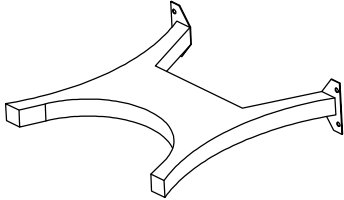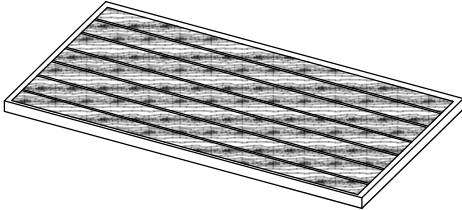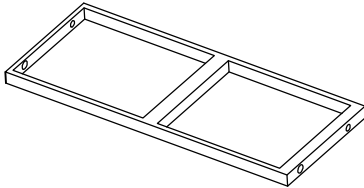1	2	3
		
2 ks	1 ks	1 ks

			
G: 1 ks	M8x20 mm B: 8 ks	Ø16x1 mm C: 12 ks	M6X40 mm F: 4 ks

